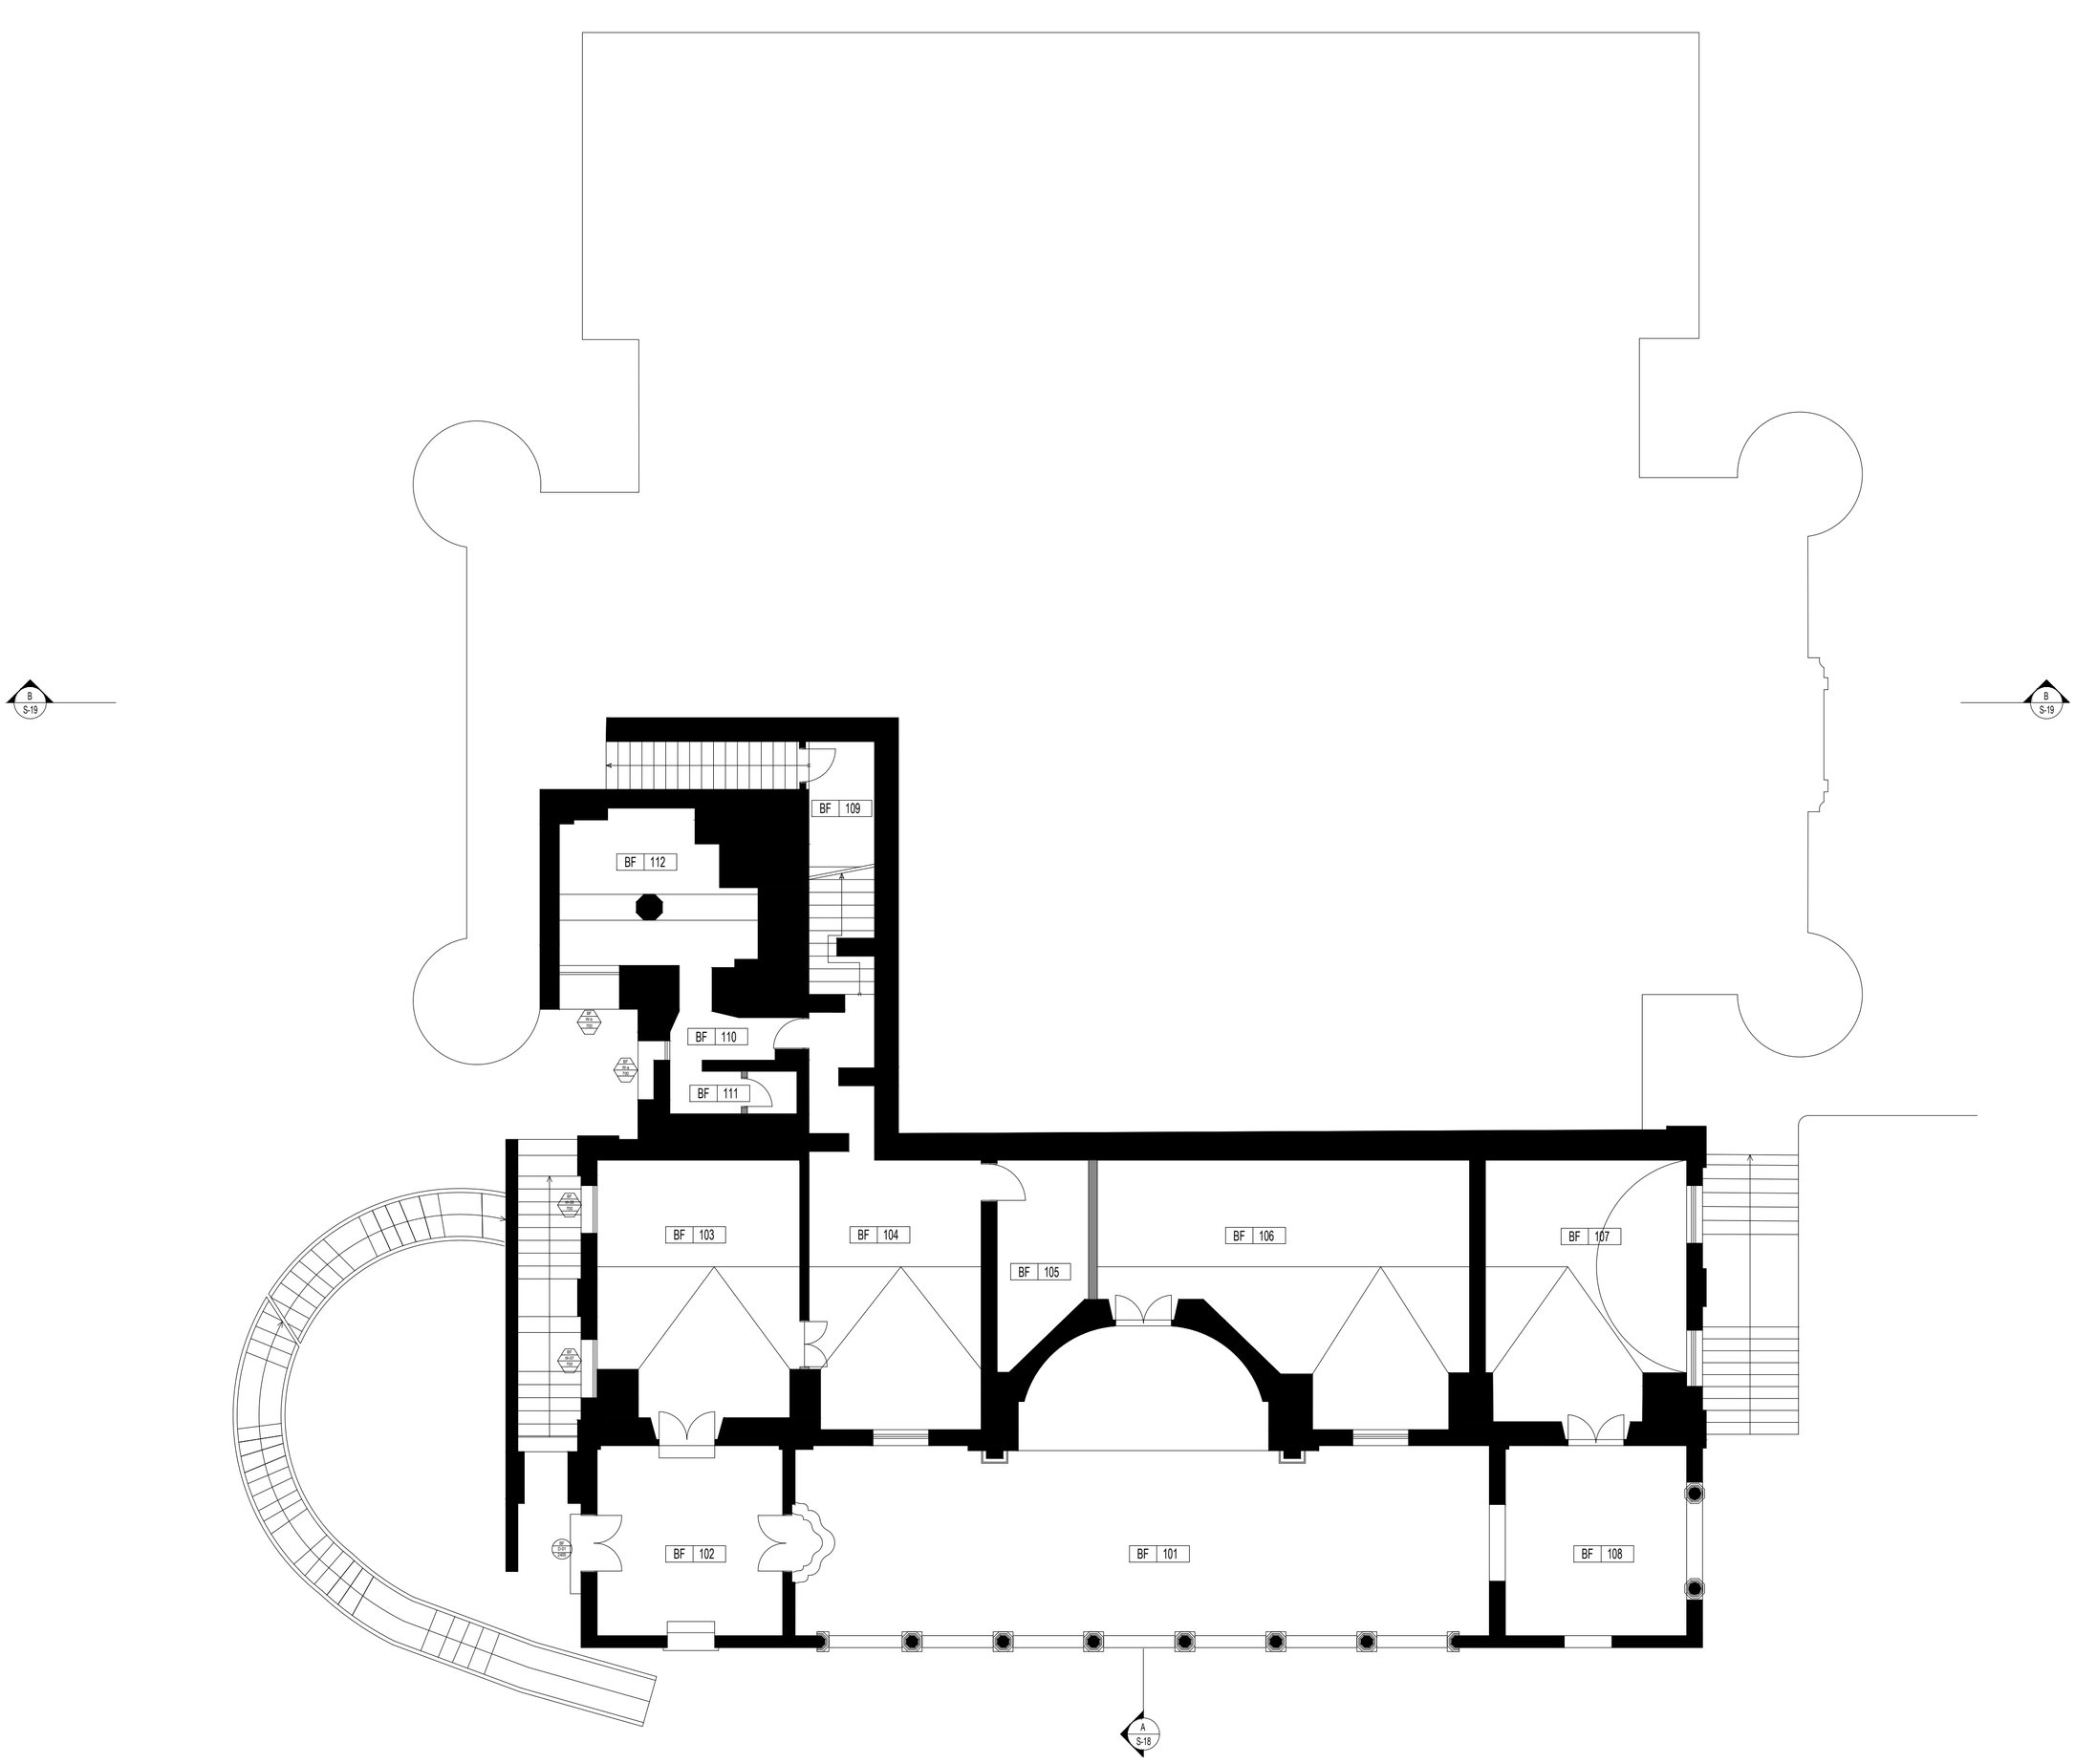

Basement level

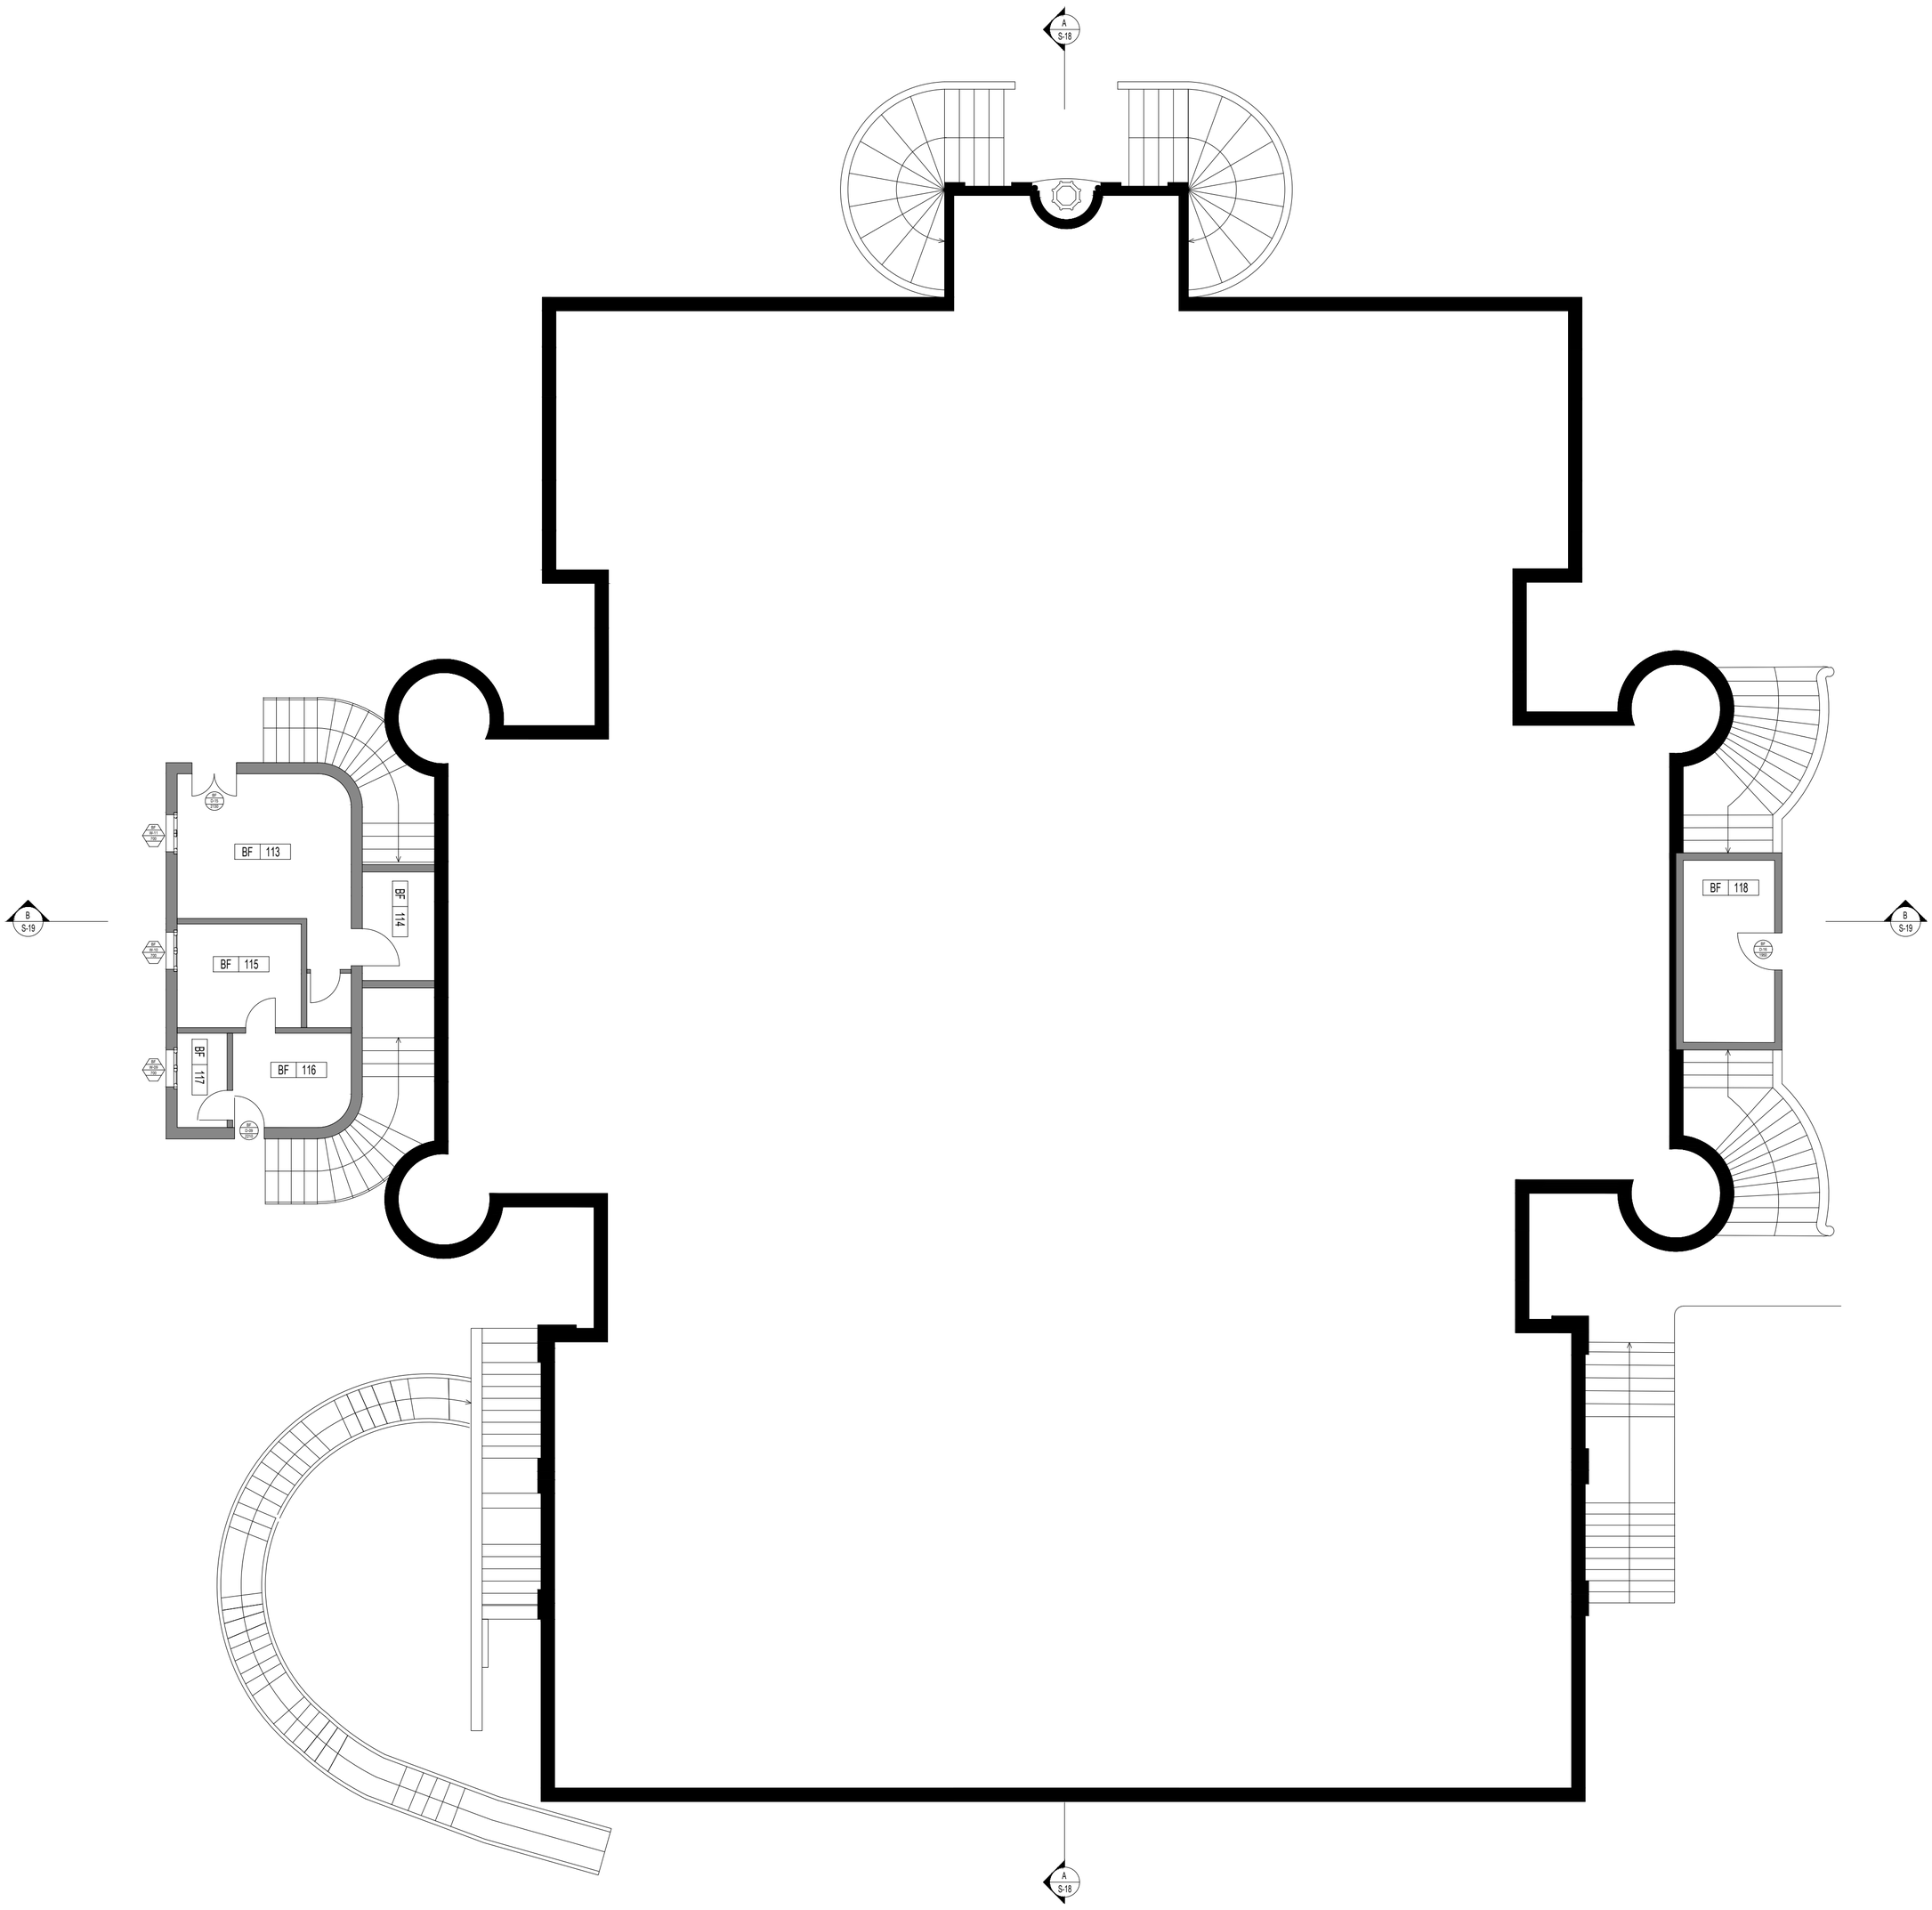

Garden level

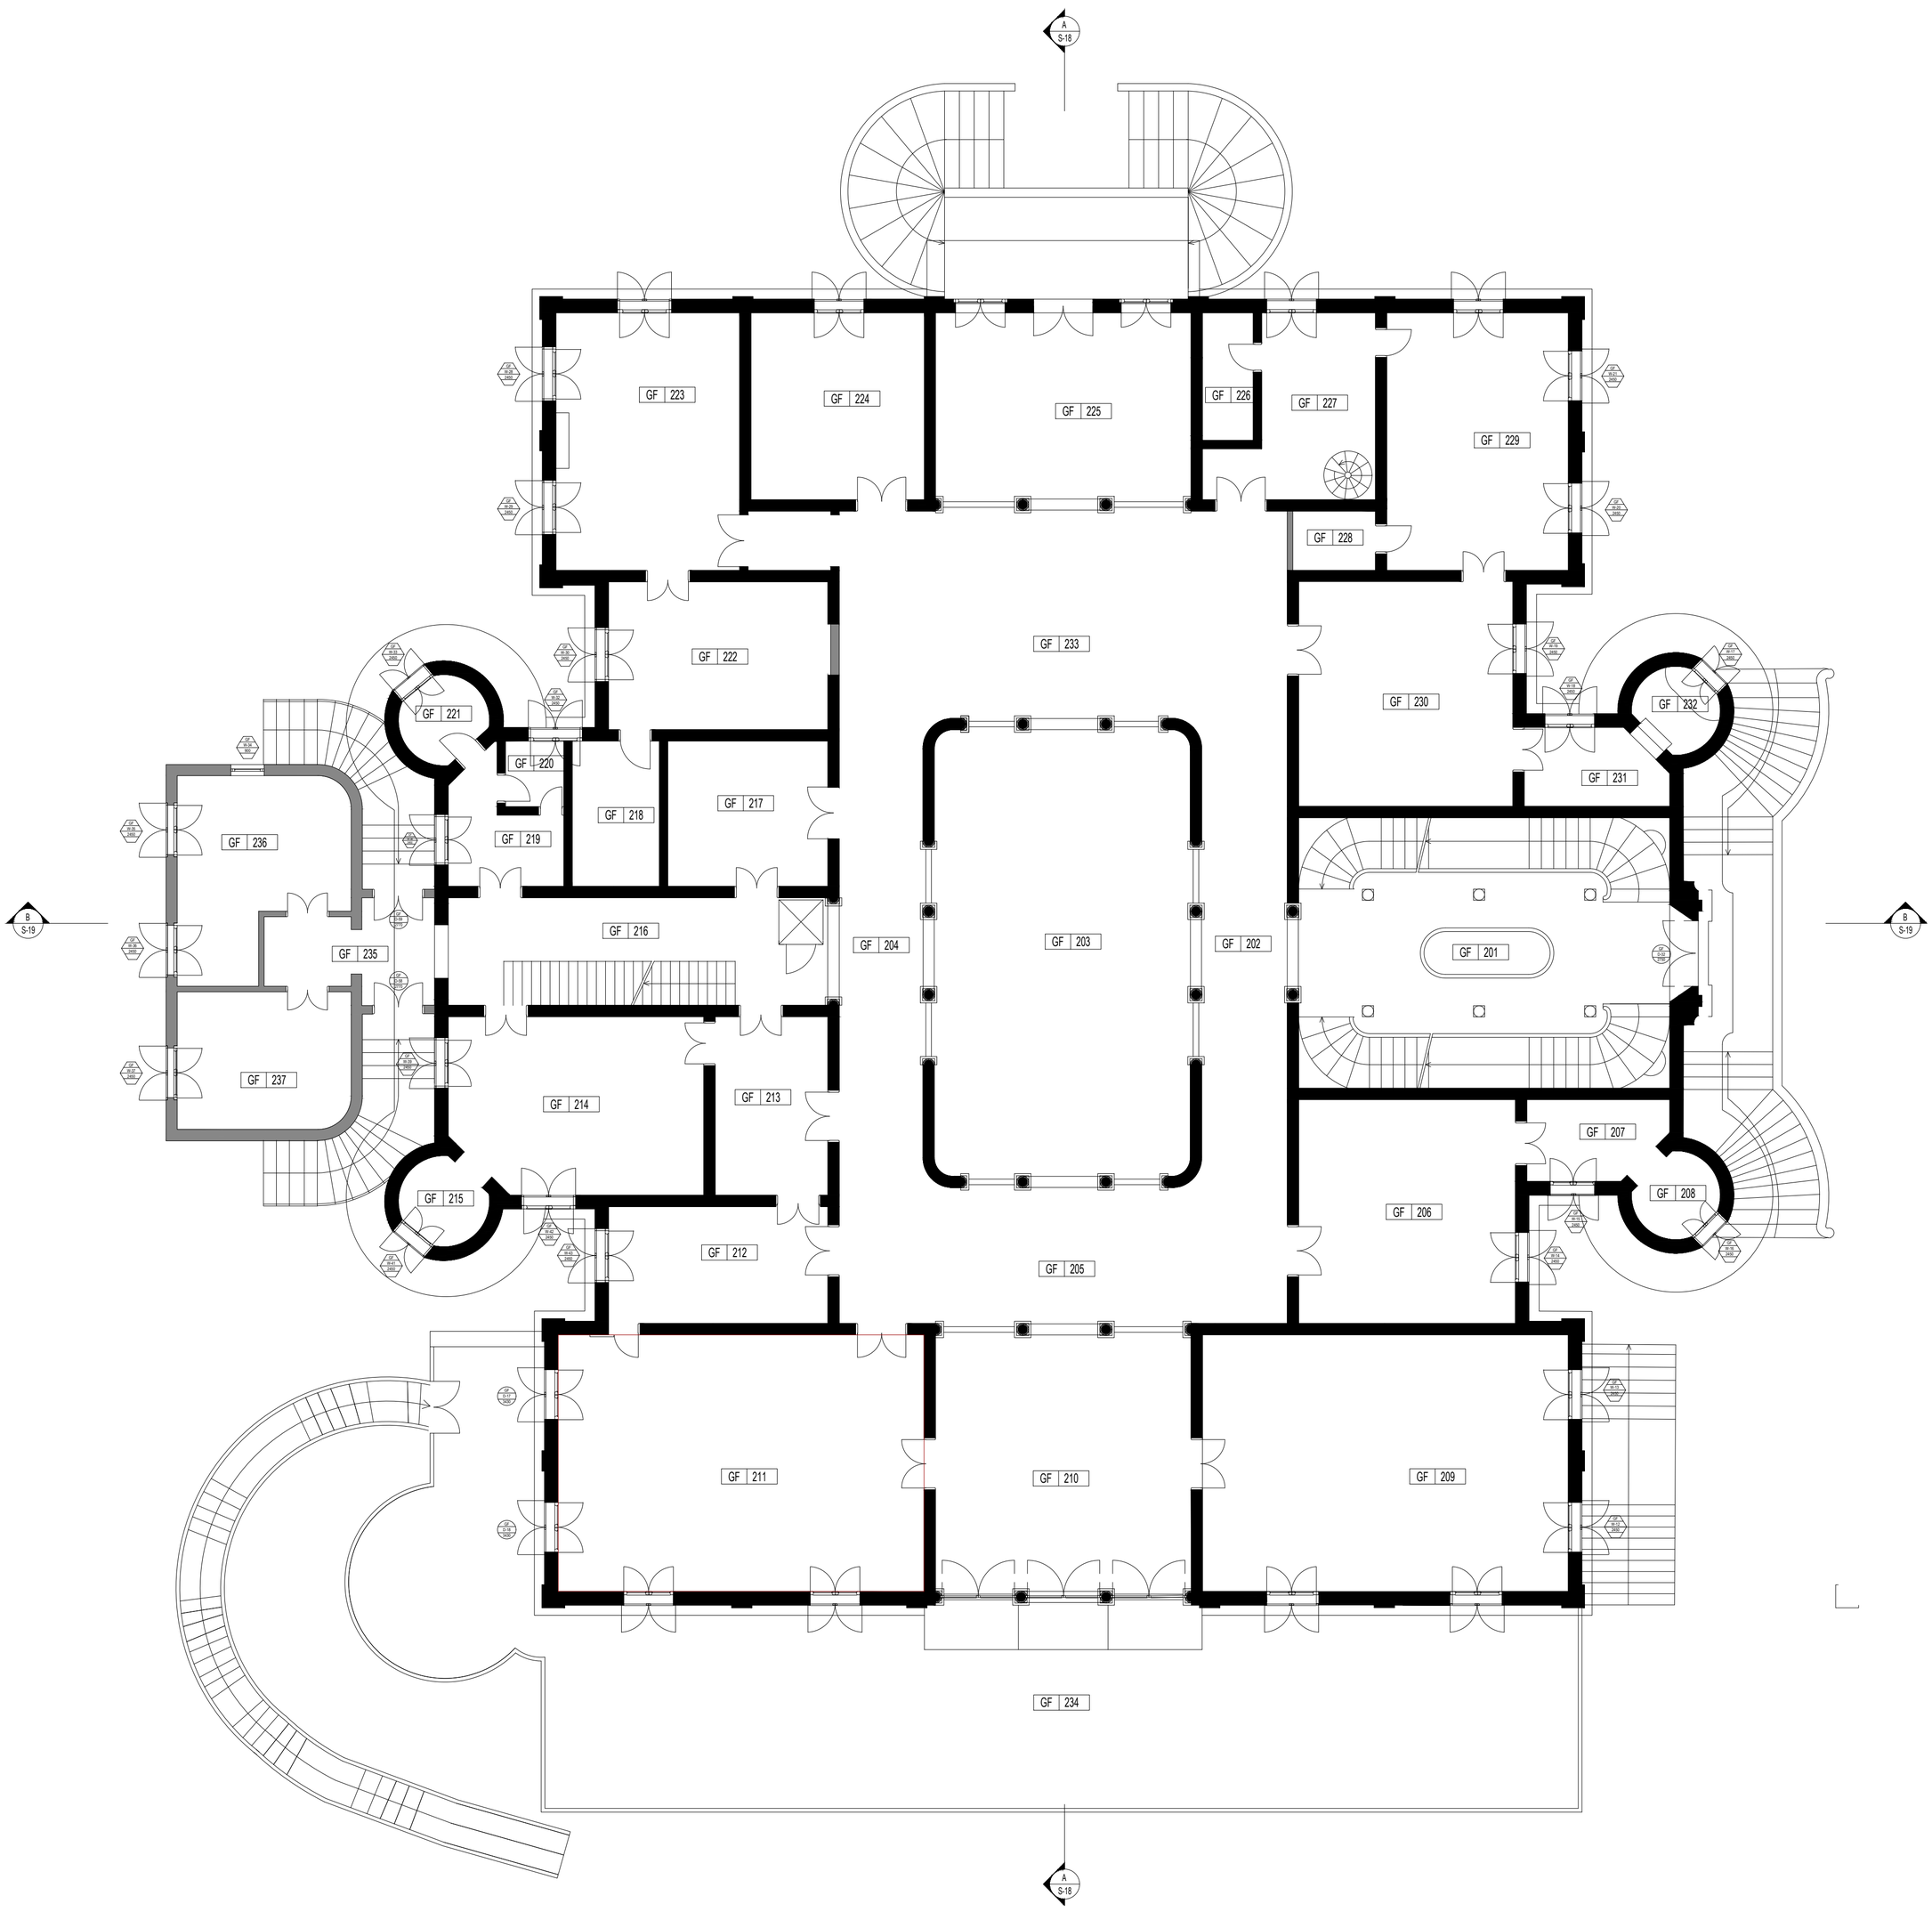

Ground floor level

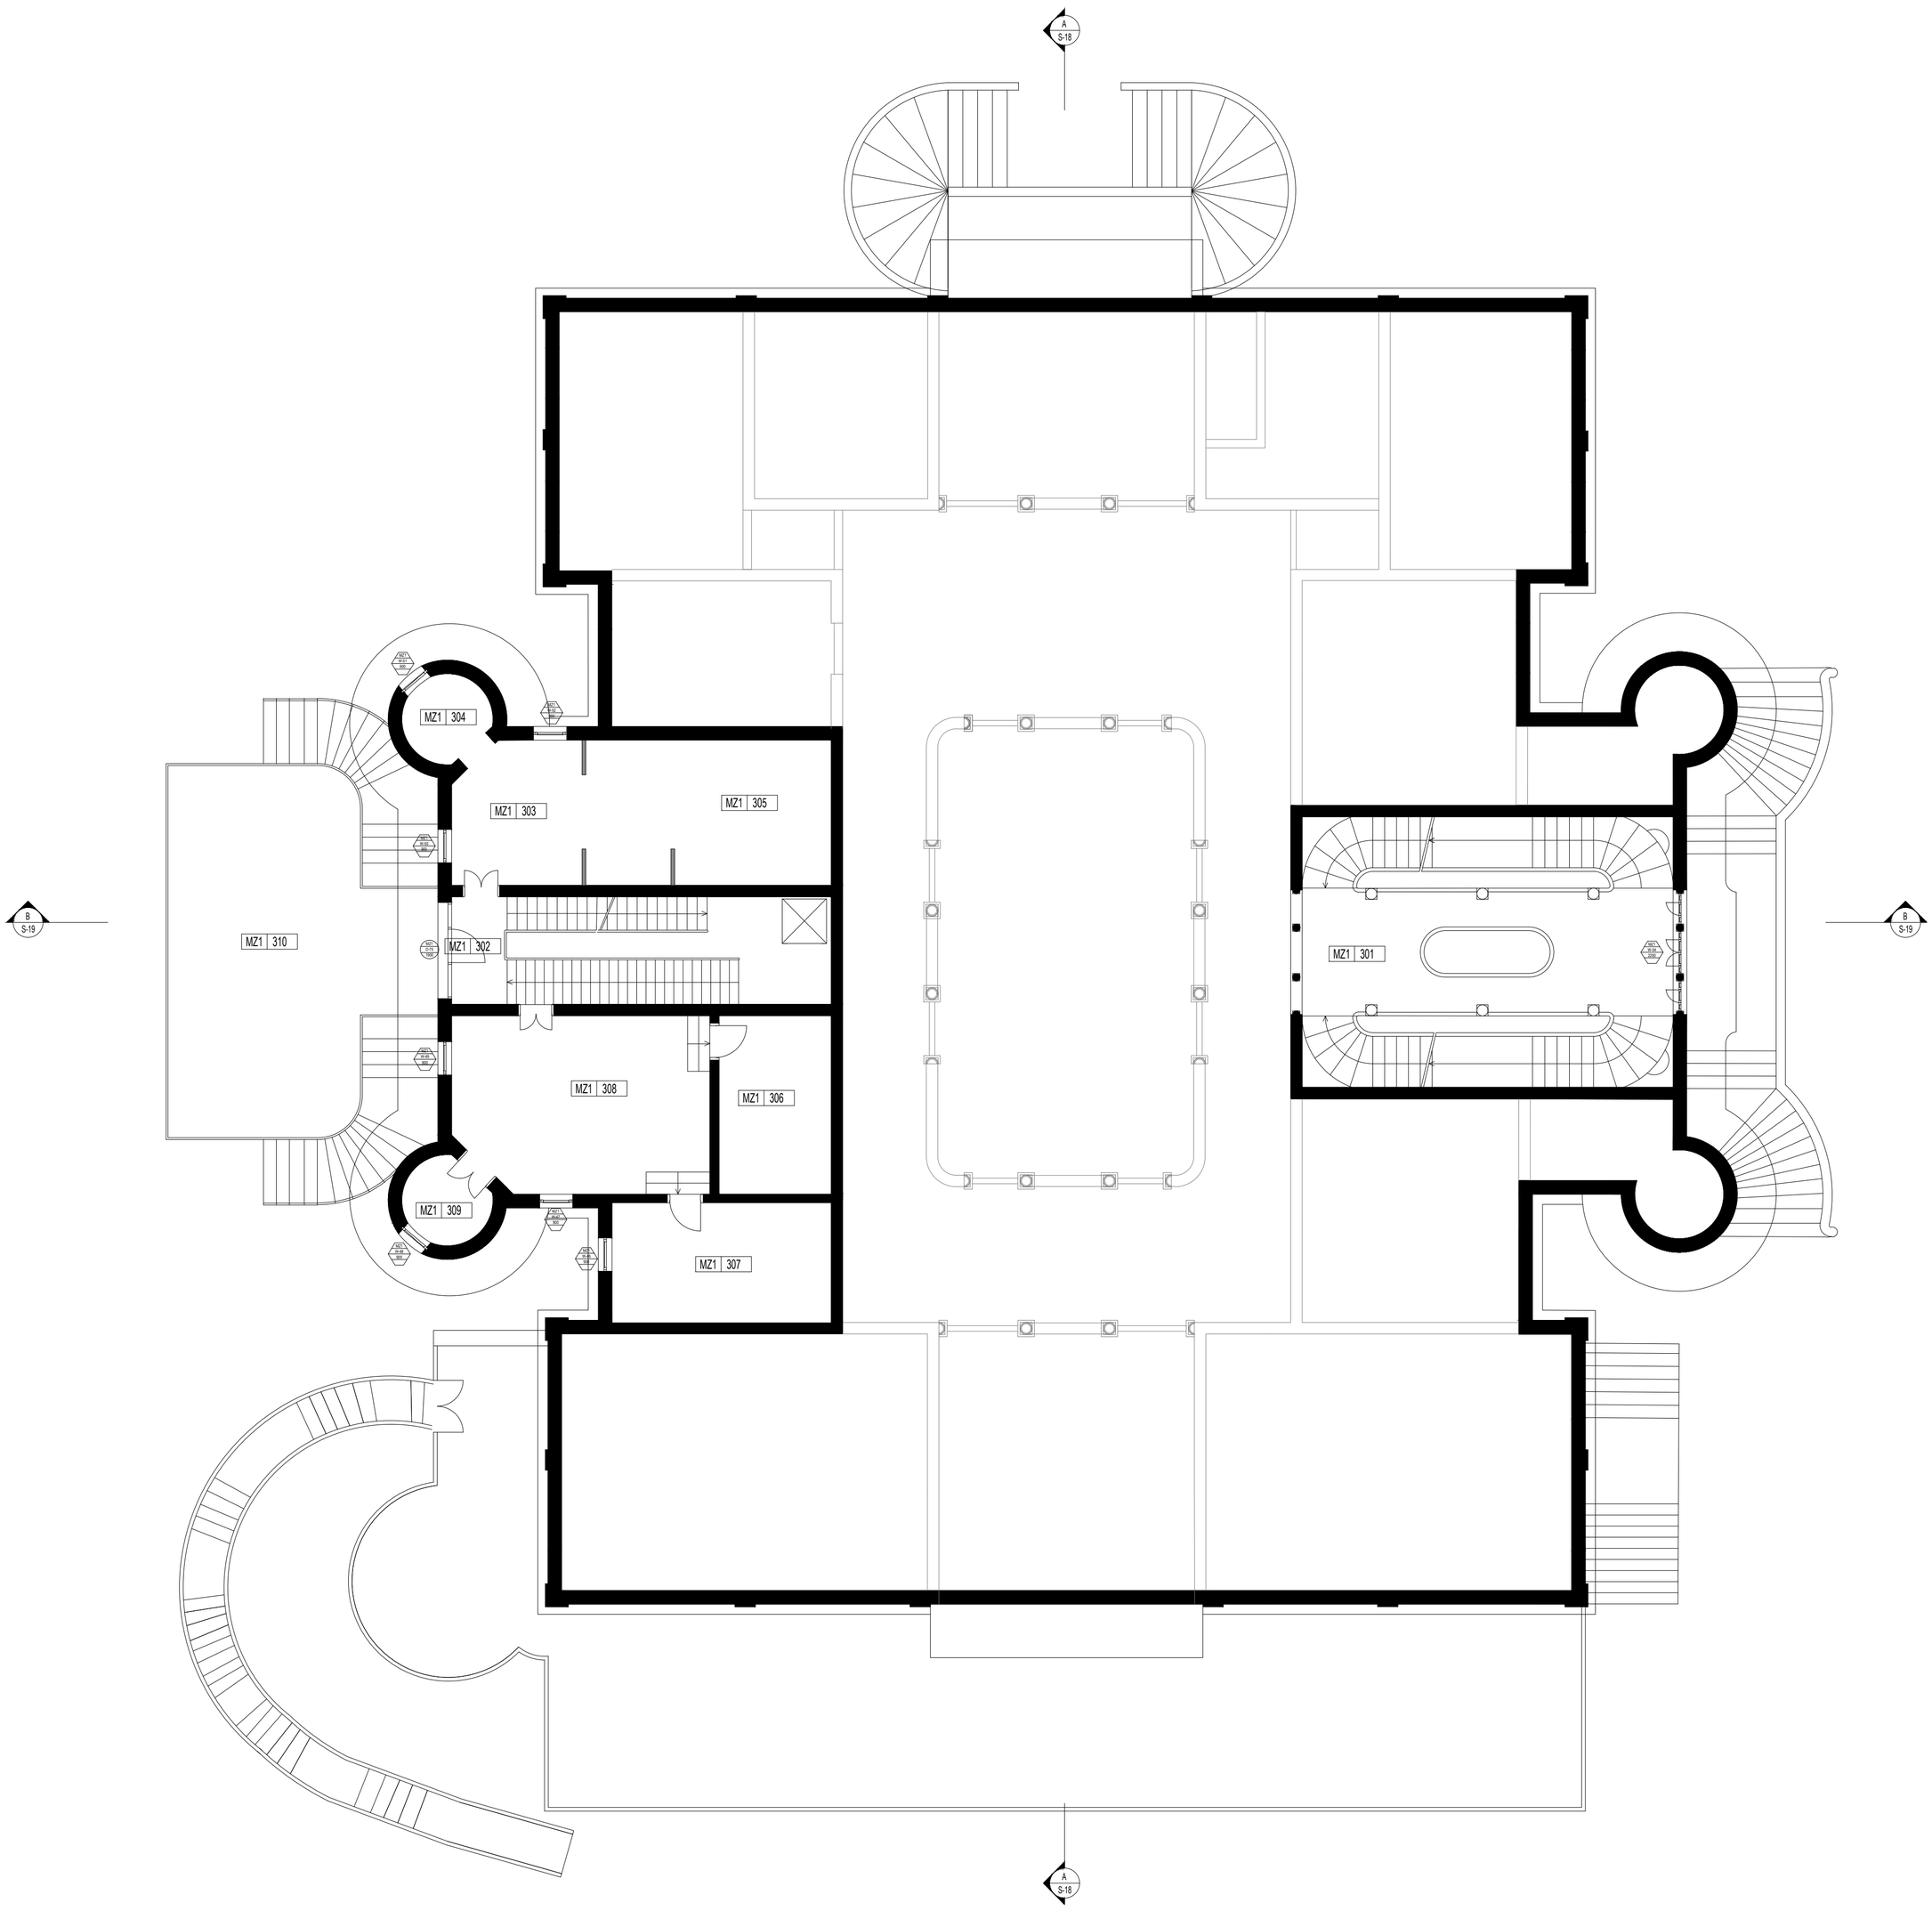

Mezzanine 01 level

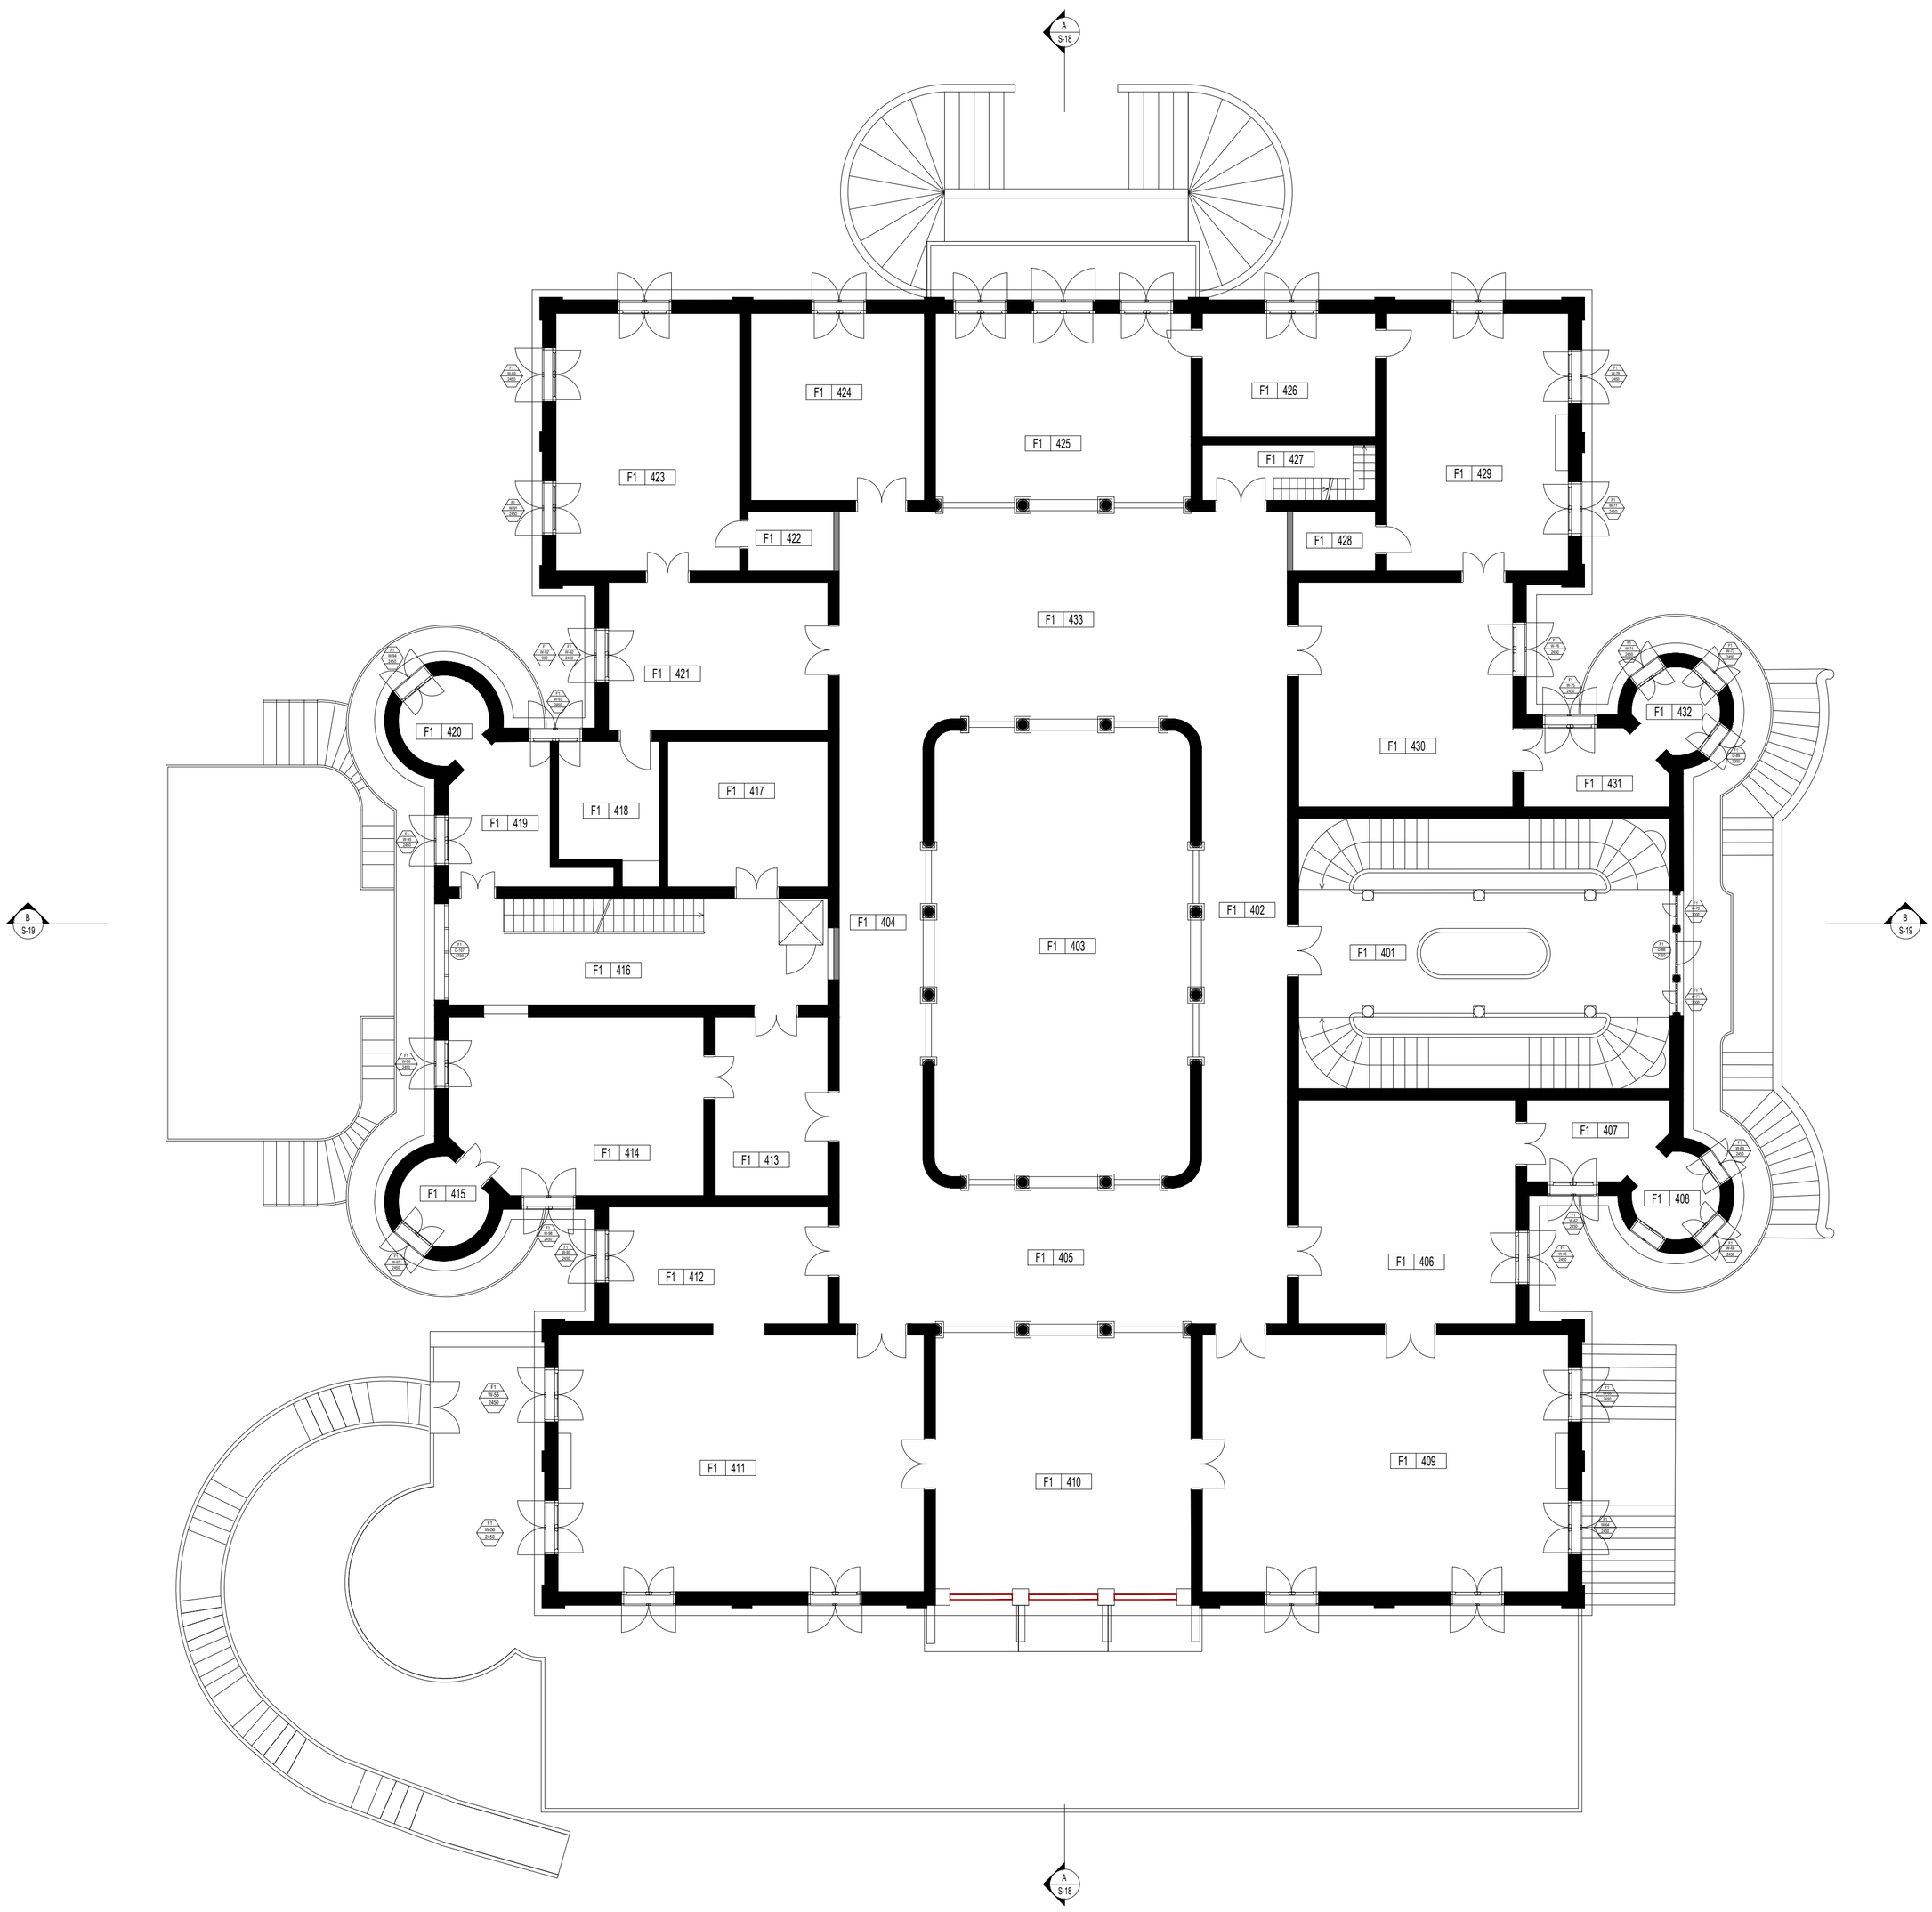

First floor level

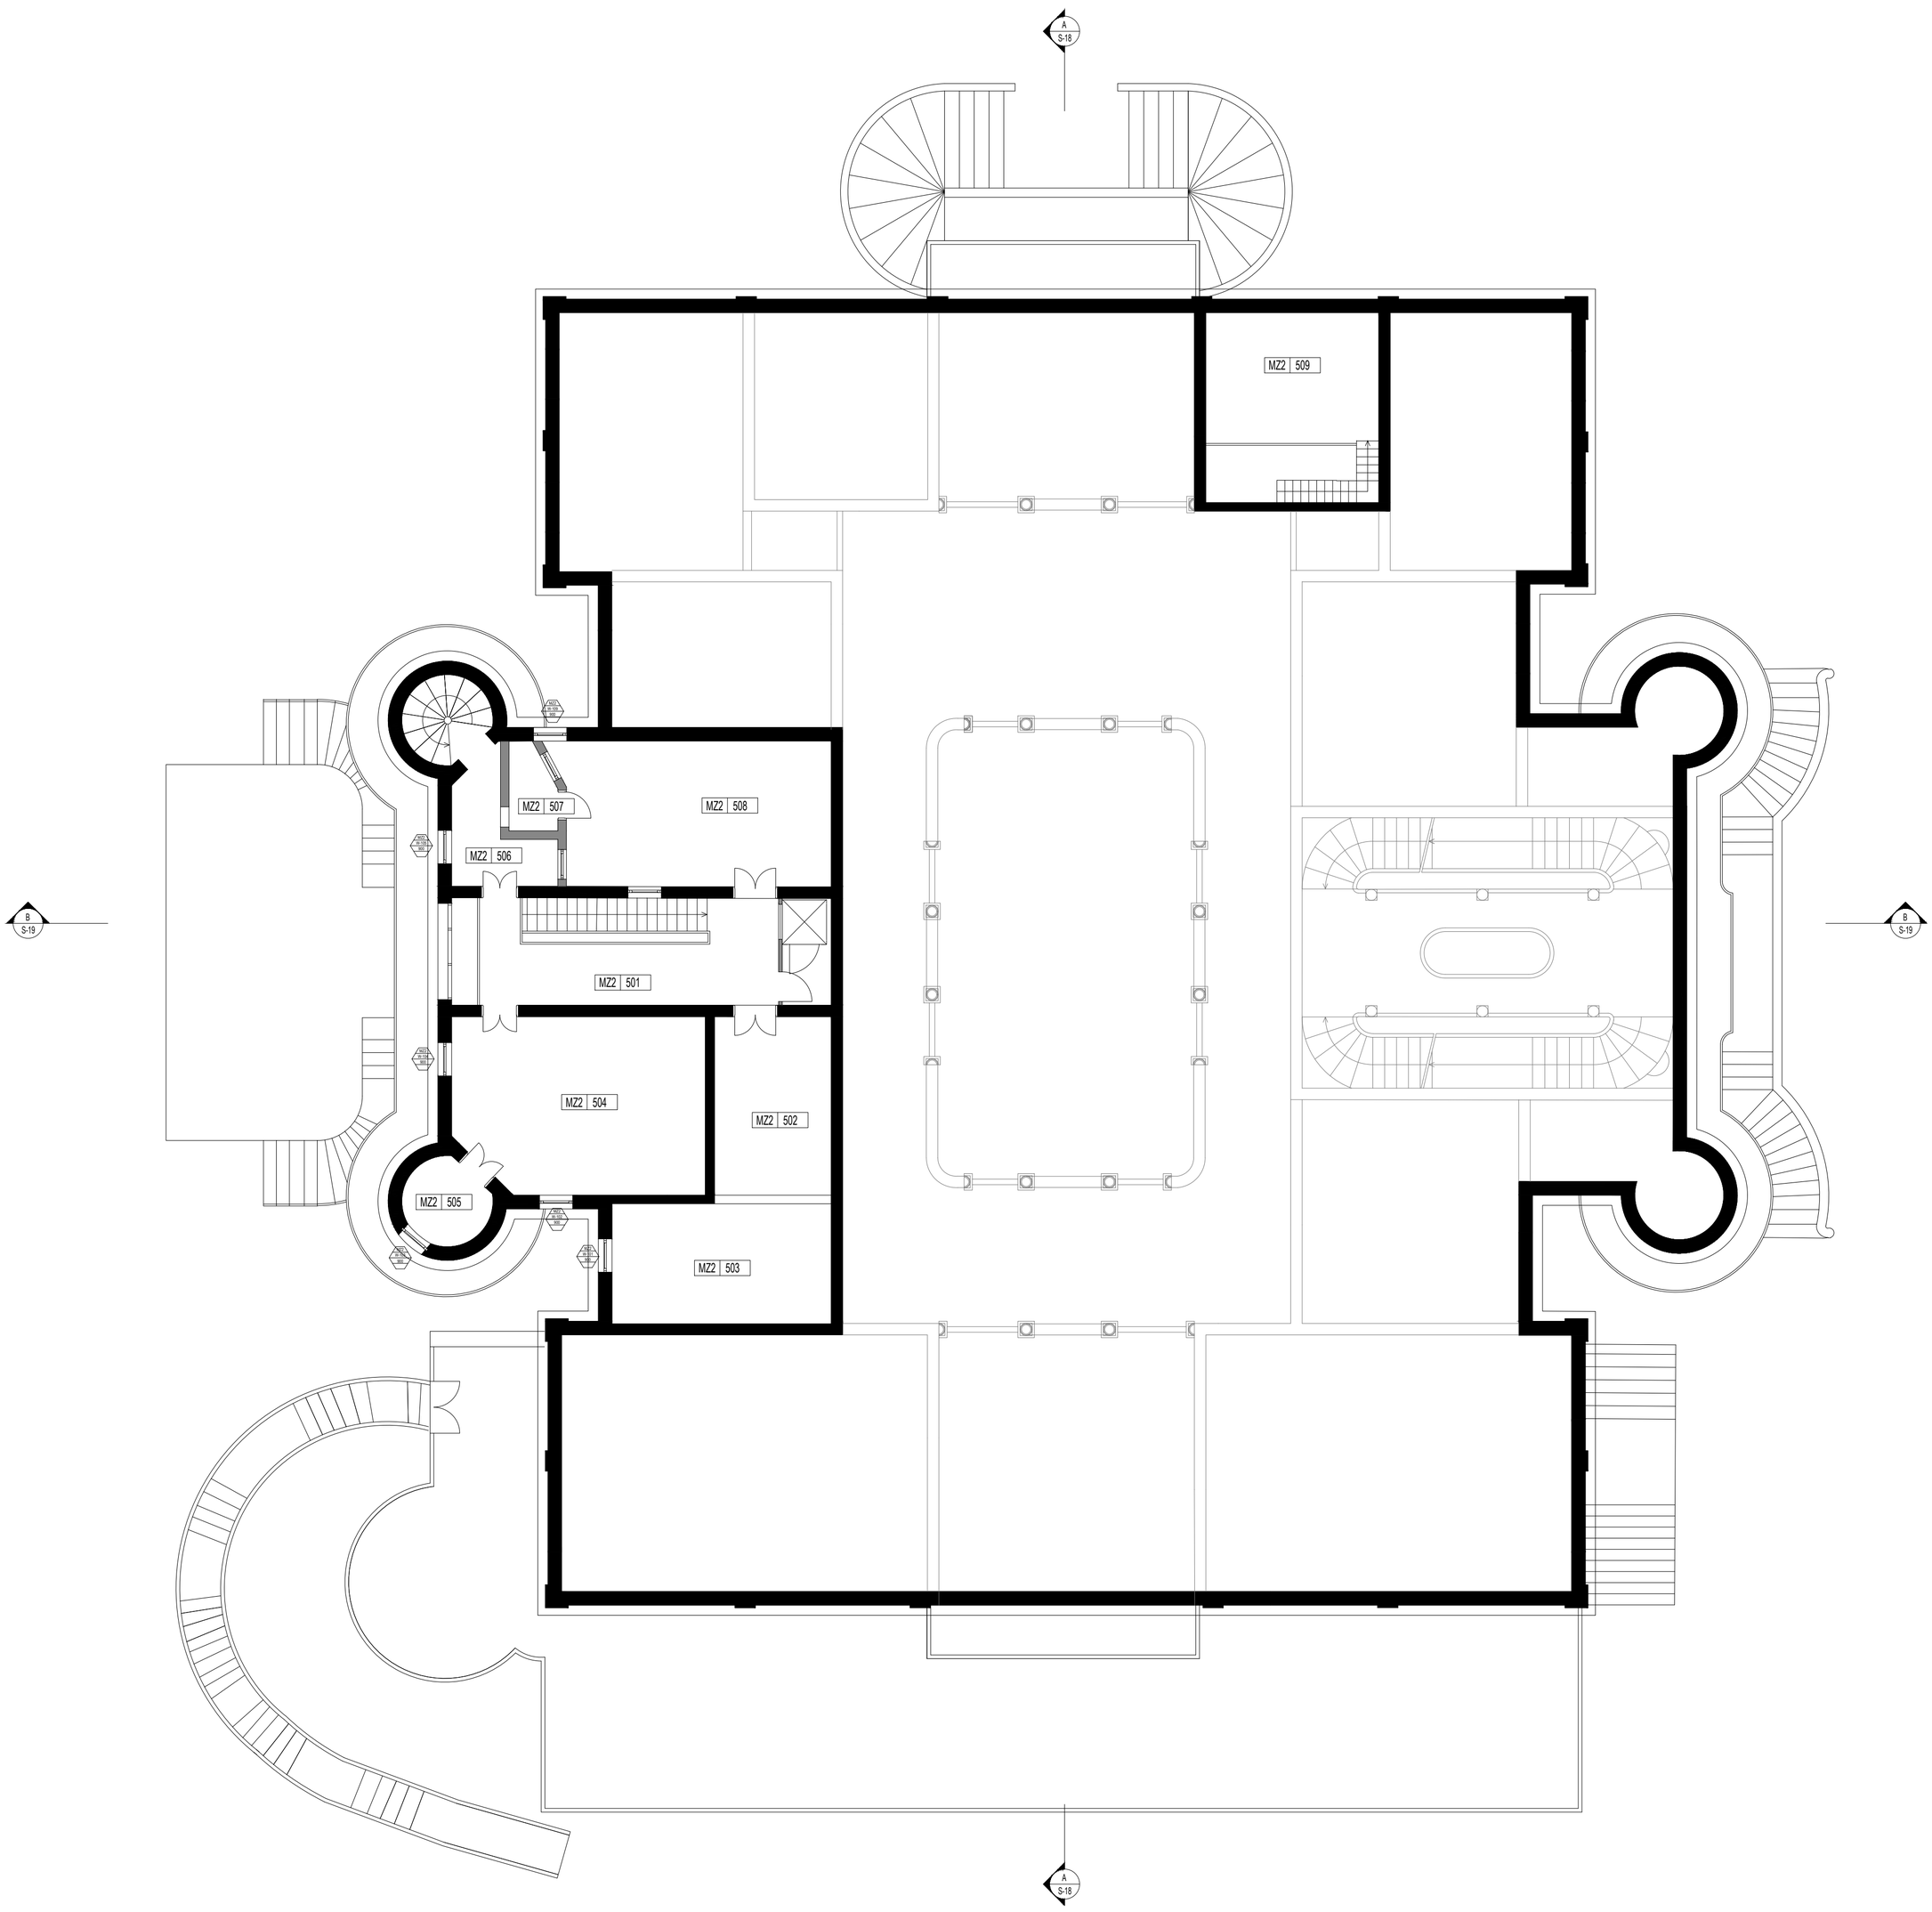

Mezzanine 02 level

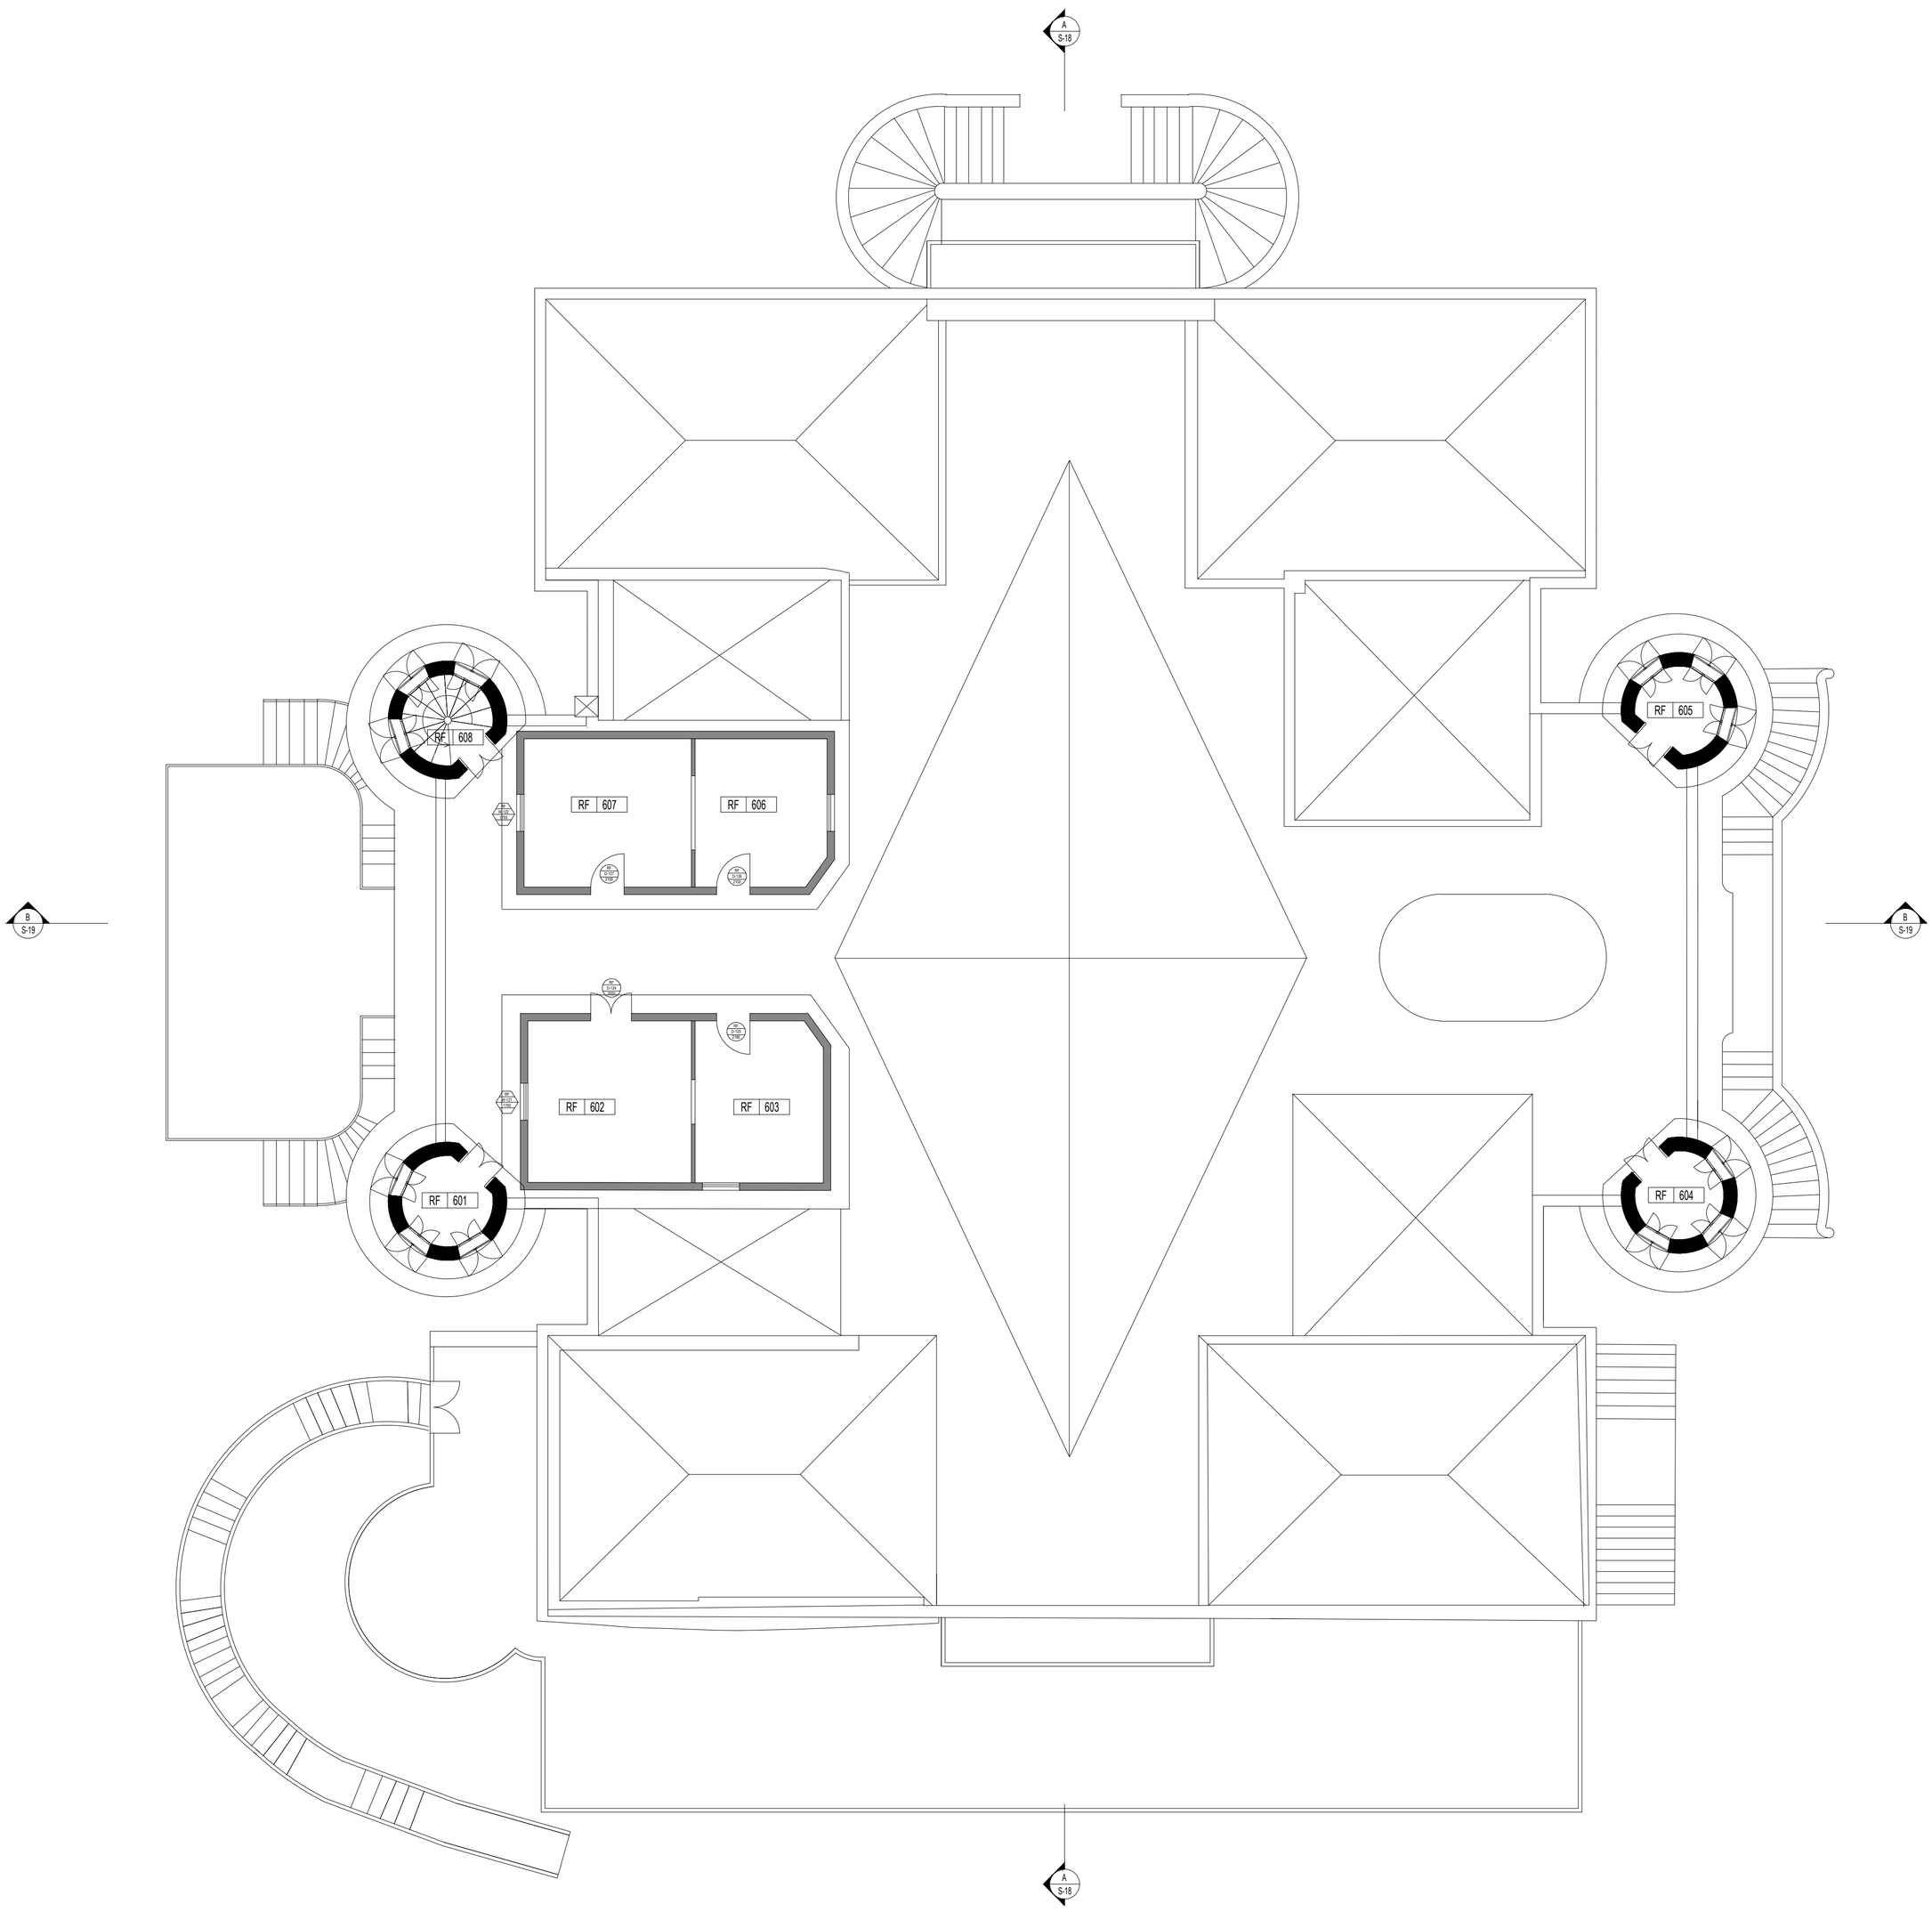
A
S-18
B
S-19
RF 608
RF 607
RF 606
RF 605
RF 602
RF 603
RF 601
RF 604
B
S-19
A
S-18

Roof level